

# इंटरनेट

# मानक

## Disclosure to Promote the Right To Information

Whereas the Parliament of India has set out to provide a practical regime of right to information for citizens to secure access to information under the control of public authorities, in order to promote transparency and accountability in the working of every public authority, and whereas the attached publication of the Bureau of Indian Standards is of particular interest to the public, particularly disadvantaged communities and those engaged in the pursuit of education and knowledge, the attached public safety standard is made available to promote the timely dissemination of this information in an accurate manner to the public.

“जानने का अधिकार, जीने का अधिकार”

Mazdoor Kisan Shakti Sangathan

“The Right to Information, The Right to Live”

“पुराने को छोड़ नये के तरफ”

Jawaharlal Nehru

“Step Out From the Old to the New”

IS 3937-3 (1993): Recommendations for socketing of wire ropes, Part 3: Socketing with resins [MED 10: Wire Ropes and Wire Products]



“ज्ञान से एक नये भारत का निर्माण”

Satyanarayan Gangaram Pitroda

“Invent a New India Using Knowledge”



“ज्ञान एक ऐसा खजाना है जो कभी चुराया नहीं जा सकता है”

Bhartrhari—Nitiśatakam

“Knowledge is such a treasure which cannot be stolen”



BLANK PAGE



भारतीय मानक  
तार रस्सियों के सॉकेटिंग की सिफारिशें

भाग 3 राल वाली सॉकेटिंग

*Indian Standard*

RECOMMENDATIONS FOR SOCKETING OF  
WIRE ROPES

PART 3 SOCKETING WITH RESINS

UDC 677'721 : 621'827'174

© BIS 1994

BUREAU OF INDIAN STANDARDS  
MANAK BHAVAN, 9 BAHADUR SHAH ZAFAR MARG  
NEW DELHI 110002

## FOREWORD

This Indian Standard ( Part 3 ) was adopted by the Bureau of Indian Standards, after the draft finalized by the Wire Ropes and Wire Products Sectional Committee had been approved by the Heavy Mechanical Engineering Division Council.

This standard has been issued in several parts. The other parts of the standard are:

- |                           |   |
|---------------------------|---|
| IS 3937 ( Part 1 ) : 1974 | Recommendations for socketing of wire ropes: Part 1 Socketing with zinc ( <i>first revision</i> ) |
| IS 3937 ( Part 2 ) : 1974 | Recommendations for socketing of wire ropes: Part 2 Socketing with white metal                    |

In the formulation of this standard assistance has been derived from the following publications:

ISO/TR 7596 : 1982 Socketing procedures for wire ropes — Resin socketing, issued by the International Organization for Standardization.

For the purpose of deciding whether a particular requirement of this standard is complied with, the final value, observed or calculated, expressing the result of a test or analysis, shall be rounded off in accordance with IS 2 : 1960 'Rules for rounding off numerical values (*revised*)'. The number of significant places retained in the rounded off value should be the same as that of the specified value in this standard.

# Indian Standard

## RECOMMENDATIONS FOR SOCKETING OF WIRE ROPES

### PART 3 SOCKETING WITH RESINS

#### 1 SCOPE

This Indian Standard ( Part 3 ) provides guidance on recommended practices for the resin socketing of wire ropes.

NOTE — When socketing ropes which have wire tensile grades greater than 1 960 MPa ( N/mm<sup>2</sup> ), special precautions may be necessary and the rope supplier should be consulted.

#### 2 REFERENCES

The Indian Standards listed below are necessary adjuncts to this standard:

IS No.	Title
13902 ( Part 1 ) : 1993	Sockets for wire ropes for general purposes : Part 1 General characteristics and conditions for acceptance ( <i>under print</i> )
13902 ( Part 2 ) : 1993	Sockets for wire ropes for general purposes: Part 2 Special requirements for sockets produced by forgings or machined from the solid ( <i>under print</i> )

#### 3 GENERAL

**3.1** IS 13902 ( Part 2 ) : 1993 specifies the dimensions of the sockets for general purpose ropes. The sockets and socketed assemblies shall pass the prototype tests indicated in the same standard.

**3.2** Sockets for use with spiral strands and locked coil ropes, and for carrying out breaking load tests on ropes may have special dimensional requirements.

#### 4 PREPARATION OF THE ROPE END

A sufficient length of the rope should be externally cleaned on both sides of the designated point of cut by wiping with a clean dry cloth. This cleaning should be confined to the length of rope to be threaded through the socket.

##### 4.1 Seizing of the Rope

Two types of seizing are recognized:

- a) Temporary seizing is used when cutting non-preformed ropes, multistrand ropes, spiral strands, etc. A temporary seizing may be applied to the rope on each side of the cut. These seizings should be such as to hold the strands and wires reasonably well in position during the cutting operation.

- b) Permanent seizing is used to hold the wires and strands during the socketing operation. A permanent seizing is applied to that part of the rope which is partly within or adjacent to the mouth of the socket or immediately outside the socket when the operation is completed. The permanent seizing should:

- 1) Ensure that the wires and strands are undisturbed during socketing operations; and
- 2) Permit the passage of the seized rope through the mouth of the socket.

#### 4.2 Seizing Material

The seizing material should be tinned or galvanized soft wire or strand for galvanized rope, and bright or galvanized soft wire or strand for bright rope. Alternative materials may be used but care should be taken that they do not cause deleterious electrolytic action in service. Copper and brass wires should not be used for seizings. Plastic seizings of proved suitability may be allowed.

#### 4.3 Cutting the Rope

The rope should be cut by any suitable method which does not disturb the position of the wires below the permanent seizing. Cutting with an abrasive wheel is to be preferred. When cutting by percussive or shearing methods special care is required. Oxyacetylene cutting should not be employed owing to the risk of heat damage to the wires and lubrication, and to the difficulties of separating the wires during subsequent socketing operations.

#### 5 PREPARATION OF THE BRUSH

##### 5.1 Preparation of the Rope

**5.1.1** Before threading the socket on to the rope, all dirt, grease or scale should be removed from the inside of the basket.

**5.1.2** The cut end of the rope should be threaded through the socket taking care that the basket walls do not come into contact with the uncleaned part of the rope. If this does occur, the rope should be unthreaded and the socket walls recleaned. After threading, the temporary seizing at the point of cut should be removed and the strands unlaidd as far as the permanent seizing, and swept outwards to allow opening of the wires.

**5.1.3** The opening angle of the final brush should not exceed  $45^\circ$  from the vertical for stranded ropes [ see Figure 1 (a) ].

**5.1.4** For locked coil ropes and spiral strands the wires should be unlaid and swept outwards at an angle not exceeding  $60^\circ$  from the vertical [ see Figure 1 (b) ].

**5.1.5** When a rope contains a steel core, the wires of the core should be completely unlaid to form an open brush.

**5.1.6** When a rope contains a fibre core, the core should be cut and removed down to the permanent seizing.

**5.1.7** After dealing with the core the individual wires from the strands should be unlaid ( but not straightened ) and a brush formed.

**5.1.8** Care should be taken not to bend the wires or the strands to an excessive angle at the permanent seizing, since this may cause premature fatigue failure in the completed assembly.

## **5.2 Cleaning and Degreasing**

**5.2.1** The open brush should be thoroughly cleaned and degreased, with either an approved organic solvent, or an emulsion type cleaner. Hot degreasing solutions are preferred. Petrol, paraffin and similar materials are not recommended.

**5.2.2** When using liquid degreasing agents, the brush should be held downward to prevent the degreasing fluid, or water, being trapped in the throat of the brush. The degreasing process may be accelerated by use of an ultrasonic device. The degreasing agent should be liberally used and worked well into the throat of the brush.

**5.2.3** If water-based cleaning agents are used, the residues should be completely removed by washing off in water.

**5.2.4** When using a vapour degreasing method, the brush should be held inserted in the vapour until all the grease and dirt has been removed. Care must be taken to ensure that the rope above the serving is not immersed in the vapour.

### **5.2.5 Caution**

During the cleaning and degreasing operations, the following precautions shall be taken:

- a) Great care must be taken that degreasing is confined to the brush, and does not affect the rope beyond the brush.
- b) When using water-based cleaning agents, it is essential to ensure that the agent is completely removed, and that the brush is dried quickly.

- c) In all cases the time between cleaning and pouring the socketing resin should be as short as possible to minimize oxidation and corrosion of the rope.
- d) Chlorinated hydrocarbons and other toxic or flammable organic solvents shall only be used in areas designed for the purpose, or in an extremely well ventilated environment.

## **5.3 Hooking**

Hooking of wires (i.e. turning over the wire ends without a sharp radius) is recommended for  $6\times 7$  and similar coarse construction ropes especially where there is the possibility of shock loading. Hooking of wires for other constructions is not normally necessary.

## **6 POSITIONING AND ALIGNMENT OF BRUSH, ROPE AND SOCKET**

**6.1** A seizing wire shall be placed around the brush near its top end to draw the brush slightly together to form a shape approximating to, but slightly smaller than, the shape of the socket basket, to prevent an appreciable length of the outermost wires from bearing against the wall of the socket when the socket is positioned over the brush.

**6.2** The socket basket should be drawn over the brush until the ends of the wires, or the bends in the hooked wires, are 1 to 2 mm above the basket of the socket. Alternatively, the wire ends may be slightly below the top of the socket, but in these cases the rope just below the mouth of the socket should be marked to indicate any movement during subsequent operations.

**6.3** The wires should be evenly distributed as far as possible at the top of the socket basket.

**6.4** Following the positioning of the brush, the rope should be clamped to a suitable support and the axes of the rope and socket aligned. The rope below the socket should be straight for at least 30 times the rope diameter, after which the rope may be allowed to bend but with a radius of at least 50 times the rope diameter.

**6.5** The neck of the socket should then be sealed with yarn, fibre or flexible putty or clay ( the latter being especially useful in the case of large open-lay ropes ) to prevent the passage of resin. Care should be taken to ensure that the sealing material is not pushed into the gap between the socket and the rope. If this occurs it will prevent penetration of the resin through to the socket mouth, which could lead to corrosion and premature fatigue failure in service.

## **7 PREPARATION AND POURING OF SOCKETING RESIN**

**7.1** The resin should be mixed and poured in accordance with the manufacturer's or sponsor's instructions. In all cases the resin should be poured close to the side of the socket.

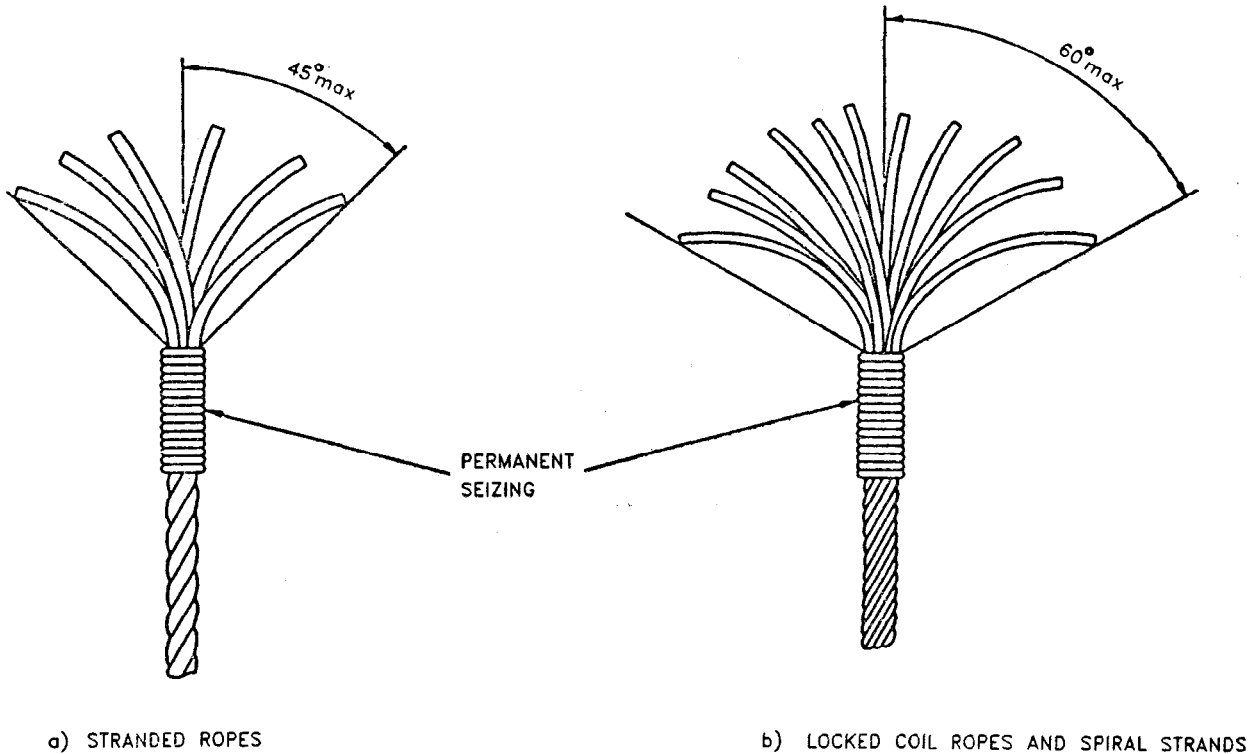


FIG. 1 OPENING ANGLE OF THE BRUSH

7.2 Any entrapped air may be removed by stirring the resin with a single wire.

7.3 Should the initial mix of resin be insufficient to fill the socket, or, in the case of large sockets should any shrinkage occur, it is important that the manufacturer's or sponsor's instructions regarding topping up procedures be followed carefully.

7.4 After pouring, the resin must be allowed to harden before any attempt is made to move the rope or socket.

7.5 The hardness of the material can be ascertained by checking any residual material in the mixing vessel or, simply, by scratching the surface of the resin in the socket with a piece of sharp metal.

7.6 When the resin has hardened, the seizing should be removed up to the mouth of the socket to facilitate inspection.

7.7 A suitable corrosion preventive compound should be applied to the cleaned length of the rope taking care to cover all exposed wires and to seal the mouth of the socket.

## 8 SOCKETING RESINS

8.1 For guidance some examples of commonly used socketing resins are given in Annex A.

8.2 Manufacturer or sponsor instructions should always be consulted before use and care should be taken not to exceed the recommended shelf life of the material.

8.3 Resin socketing offered for use shall have passed the prototype test on the socketed assembly, as specified in IS 13902 (Part 1) : 1993.

8.4 The sponsor or manufacturer should provide adequate information on the resin socketing system.

### NOTES

1 Resin socketing is a relatively new technique and evidence on stability over an extended period is limited. Therefore caution should be exercised when using resin socketing in installations which have a long life (say over four years).

2 Resins are more temperature sensitive than the socketing metals. In view of this the sponsor or manufacturer should be consulted if the temperature in use is likely to exceed 70°C.

## 9 QUALITY CONTROL

The quality of the socketing may be assessed in one of the following ways:

- By removing the cone after solidification, and visually inspecting it to ensure that it is satisfactory. If this method is used, care should be taken to ensure that the orientation of the cone in the socket is the same before and after inspection. This may be achieved by setting a mark.
- By visual inspection to ensure that the socket resin has completely filled the annulus between the rope and the socket mouth, and that the socket is properly filled with socketing material.
- By proof loading to 40 percent of the minimum specified breaking load of the rope, after which the rope shall not have moved out of the mouth of the socket by more than 2 percent of the basket length.



**ANNEX A**  
**( Clause 8.1 )**

**EXAMPLES OF COMMONLY USED SOCKETING RESINS**

**A-1 EPOXIDE RESINS**

**A-1.1** Epoxide resins are normally cured by amines or polyamides. The proportion of resin to hardener is critical and the manufacturer's or sponsor's instructions should be followed exactly.

**A-1.2** The usable or pot life is dependent upon the system in use and also upon the temperature.

**A-2 POLYESTER RESINS**

**A-2.1** These consist of various polyester/styrene solutions which are cured by the addition of organic peroxides. The amounts of catalyst to be used should not exceed 4 percent by weight, nor be less than 1 percent.

**A-2.2** The usable or pot life depends upon the amounts of catalyst used and upon the temperature.

**A-3 FILLERS**

**A-3.1** Inert fillers are permissible and in the case of polyesters, they are recommended. It is important to follow the manufacturer's or sponsor's instructions.

**A-3.2 Caution**

Resins may cause irritation of the skin and care shall be taken to ensure that they do not come in contact with bare skin.

## Bureau of Indian Standards

BIS is a statutory institution established under the *Bureau of Indian Standards Act, 1986* to promote harmonious development of the activities of standardization, marking and quality certification of goods and attending to connected matters in the country.

### Copyright

BIS has the copyright of all its publications. No part of these publications may be reproduced in any form without the prior permission in writing of BIS. This does not preclude the free use, in the course of implementing the standard, of necessary details, such as symbols and sizes, type or grade designations. Enquiries relating to copyright be addressed to the Director ( Publications ), BIS.

### Revision of Indian Standards

Indian Standards are reviewed periodically and revised, when necessary and amendments, if any, are issued from time to time. Users of Indian Standards should ascertain that they are in possession of the latest amendments or edition.

This Indian Standard has been developed from Doc : No. HMD 10 ( 0182 )

#### Amendments Issued Since Publication

Amend No.	Date of Issue	Text Affected

## BUREAU OF INDIAN STANDARDS

### Headquarters:

Manak Bhavan, 9 Bahadur Shah Zafar Marg, New Delhi 110002  
Telephones : 331 01 31, 331 13 75

Telegrams : Manaksanstha  
( Common to all Offices )

### Regional Offices:

	Telephone
Central : Manak Bhavan, 9 Bahadur Shah Zafar Marg NEW DELHI 110002	{ 331 01 31 331 13 75
Eastern : 1/14 C. I. T. Scheme VII M, V. I. P. Road, Maniktola CALCUTTA 700054	{ 37 84 99, 37 85 61 37 86 26, 37 86 62
Northern : SCO 445-446, Sector 35-C, CHANDIGARH 160036	{ 53 38 43, 53 16 40 53 23 84
Southern : C. I. T. Campus, IV Cross Road, MADRAS 600113	{ 235 02 16, 235 04 42 235 15 19, 235 23 15
Western : Manakalaya, E9 MIDC, Marol, Andheri ( East ) BOMBAY 400093	{ 632 92 95, 632 78 58 632 78 91, 632 78 92
Branches : AHMADABAD. BANGALORE. BHOPAL. BHUBANESHWAR. COIMBATORE. FARIDABAD. GHAZIABAD. GUWAHATI. HYDERABAD. JAIPUR. KANPUR. LUCKNOW. PATNA. THIRUVANANTHAPURAM.	